

1 987 431 043

VW LT

05.96 →

**Mercedes-Benz
Sprinter**

02.95 →

D Innenraumfilter
Montageanleitung

NL Interieurfilter
Montagehandleiding

GB Cabin filter
Installation instructions

**E Filtro ventilacion
para interior**
Instrucciones de montaje

F Filtre d'habitacle
Notice de montage







**P Filtro de purificação
do habitáculo**
Instruções de montagem


I Filtro abitacolo
Istruzioni di montaggio

S Kupéfilter
Installationsanvisning

BOSCH



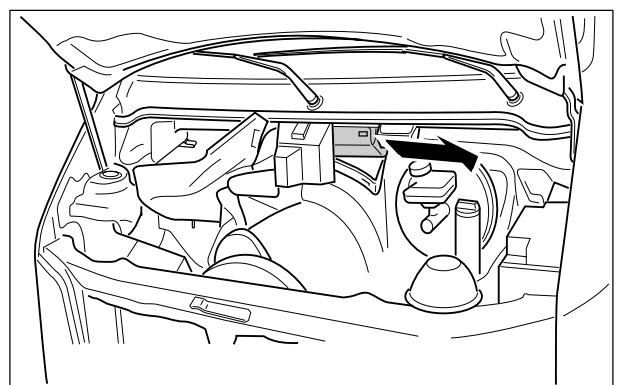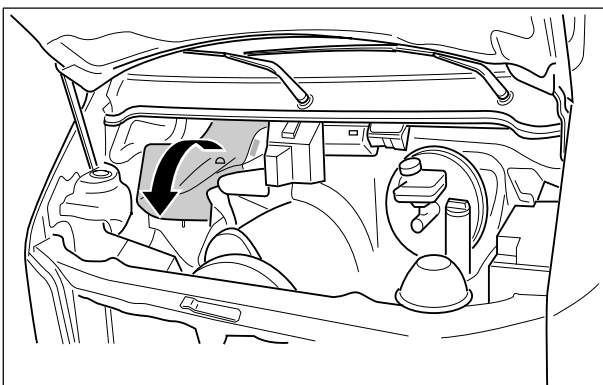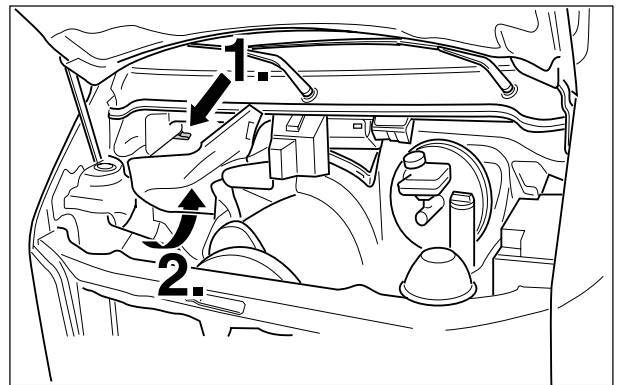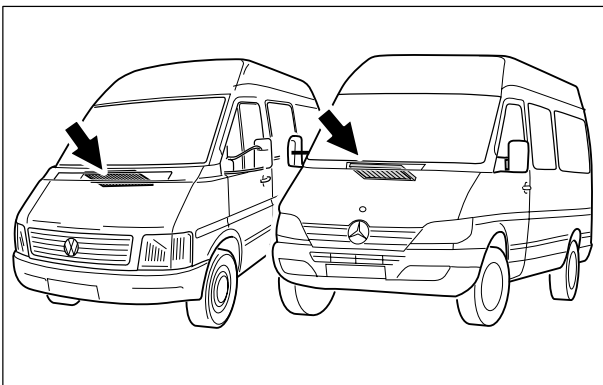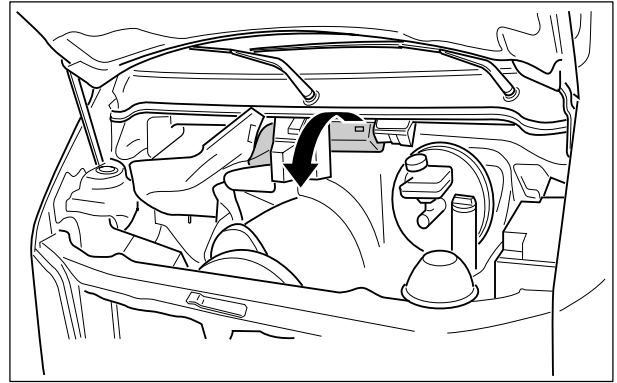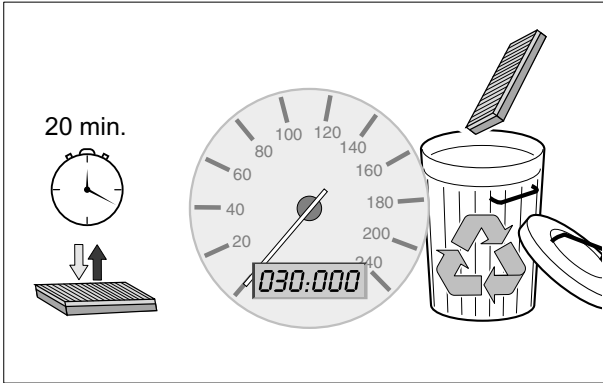

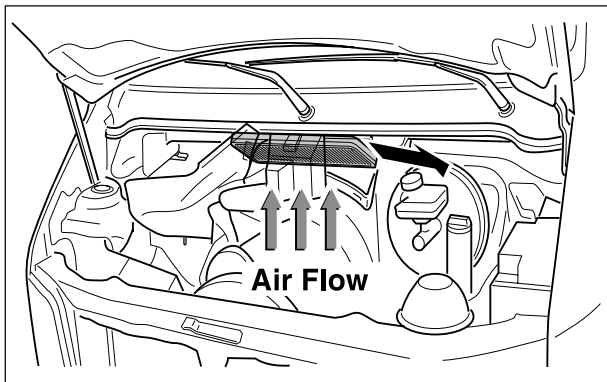


Print Nr. 1 987 999 556 (02.02)



Service

+49 (0) 180-500 4745

gebührenpflichtig/subject to charges/payant



Robert Bosch GmbH
Postfach 41 09 60, D-76225 Karlsruhe
www.bosch-automotive.com



Gedruckt auf Recycling-Papier Printed in Germany
Printed on recycled paper Imprimé en Allemagne